


LAIA B&H MIC


P/N: BHM

User manual


1 Product overview

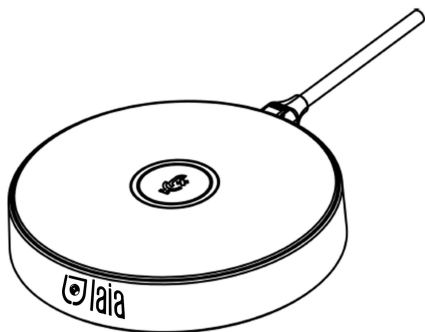

2 Pack

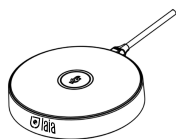

Microphone X1

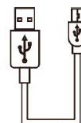

USB Cable X1

3 Product features

Small and Portable

B&H Mic omnidirectional portable microphone has small and compact design allowing you to storage it in any compartment to carry with it easily.

Plug and Play

USB plug and play to connect it to computers, tablets and video conference terminals, compatible with a variety of systems and software, suitable for daily applications such as video calls. The 3.5mm plug is connected to a computer, mobile phone or tablet and video conference terminal easily and fast, allowing you to enjoy the device's quality sound.

HD Call

Intelligent noise reduction, full sound quality, clear calls, anti-interference, high fidelity, call conferences and video conferences at any time with 360° omnidirectional far-field pickup.

Sound pickup and comfortable communication

360-degree omnidirectional pickup, 6-meter pickup distance, standard 5-meter USB cable connection, no longer talking to the conference equipment, allowing you to stand and stretch freely during long calls.

4 Specifications

Meeting Capacity	
Covering Area	15-30m ²
Number of Participants	5~8 person
Microphone	
Distance	6m
Frequency Response	100-10kHz
Directivity	Omnidirectional
Sensitivity (1kHz)	- 40.5dB (V/Pa)
Signal to Noise Ratio (SNR)	64dBA
Total Harmonic Distortion (THD)	10% (1kHz, 120 dB SPL)
Support Operation System	Windows XP/Vista/7/8/10
Interface & Button	
Power Supply	USB: 5V DC
Interface	<ul style="list-style-type: none"> 1 x USB Interface 1 x 3.5mm Audio Interface
Button	1 x Illuminated Mute Button
Cable Length	5m
Physical Parameter	
Dimensions (R x H)	Φ100mm × 20mm
Net Weight	0.15 Kg
Environmental Condition	
Operating Temperature	0°C ~ 40°C
Storage Temperature	-20°C ~ 70°C
Relative Humidity	5% ~ 95% (non-condensing)

5 Toxic substances


Part Name	Toxic or harmful substances or elements					
	(Pb)	(Hg)	(Cd)	(CrVI)	(PBB)	(PBDE)
Metal	x	○	○	○	○	○
Plastic	○	○	○	○	○	○
Glass	x	○	○	○	○	○
Circuit board	x	○	○	○	○	○
Power	x	○	○	○	○	○
Attached	x	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.

O: Indicates that the content of the hazardous substance in all homogenized materials of the component is subject to the limit specified in GB/T 26572.

x: Said the hazardous substance in at least one of the components homogenized material content in excess of the GB/T 26572 limit requirements, and there are no mature alternatives.

6 Use and connection

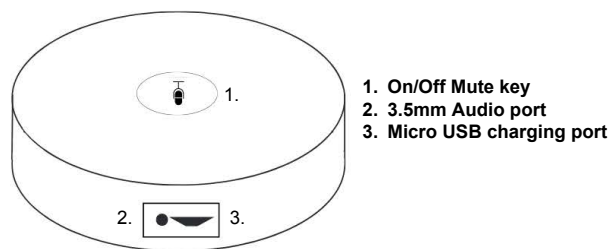

For device connection:

1. Connect cable to MicroUSB port, and to your PC.
2. Once is connected, Mute key will illuminate in green.

7 Solve problems

If your PC does not detect the device, check for USB cable.

If remote point is not receiving sound, check for "Mute" key. If so, check for mute in videoconference app and B&H Mic is selected as main microphone.